

Fplus Laser Printer Installation Guide For Ubuntu

Fplus Laser Printer Installation Guide For Ubuntu

This installation guide will tell you how to install Fplus printer driver and Fplus scan software on Ubuntu system. please copy the matched folder to the Home directory.

Note: Fplus laser printer (SFP) only needs to install Fplus printer driver. (fplus-ljp-series...deb) ; Fplus multifunctional laser integrated machine (MFP) needs to install Fplus printer driver (fplus-ljp-series...deb) and Fplus scan software(fplus-scan...deb) together.

The following will take Ubuntu64 platform as an example to introduce the installation and uninstallation methods of drivers and software:

Fplus Laser Printer Installation Guide For Ubuntu

Part one: Install Fplus printer driver

1. Please open in the Terminal and cd the path into the package folder at the Home directory. Or you can open the package folder in the Home directory, right-click in the blank space, and select "Open in Terminal" to open the command line terminal.
2. Please enter the following command in the Terminal:


```
sudo dpkg -i fplus-ljp-series.v1.0.amd64.deb
```


Then press the "Enter" key.
3. Please wait for the Terminal to prompt that the installation is complete.
4. Please restart the printer and your computer after the installation.

Part two: Install Fplus scanning software (Fplus multifunctional laser machine only)

1. Please open in the Terminal and cd the path into the package folder at the Home directory. Or you can open the package folder in the Home directory, right-click in the blank space, and select "Open in Terminal" to open the command line terminal.
2. Please enter the following command in the Terminal:


```
sudo dpkg -i fplus-scan.v1.0.amd64.deb
```


The press the "Enter" key.
3. Please wait for the Terminal to prompt that the installation is complete.
4. Please restart the printer and your computer after the installation.

Fplus Laser Printer Installation Guide For Ubuntu

Part three: Uninstall the driver and software

Please click on the blank space of any folder with the right mouse button and select "Open in Terminal" to open the command line terminal.

1. If you need to uninstall the Fplus printer driver, please enter the following command in the terminal:

```
sudo dpkg -p fplus-ljp-series
```

Then press the "Enter" key to wait for the Terminal to prompt that the uninstallation has been completed.

2. If you need to uninstall Fplus scanning software, please enter the command in Terminal:

```
sudo dpkg -P fplus-scan
```

Then press the "Enter" key to wait for the Terminal to prompt that the uninstallation has been completed.